English

TOPAZ


User Guide

TOPAZ







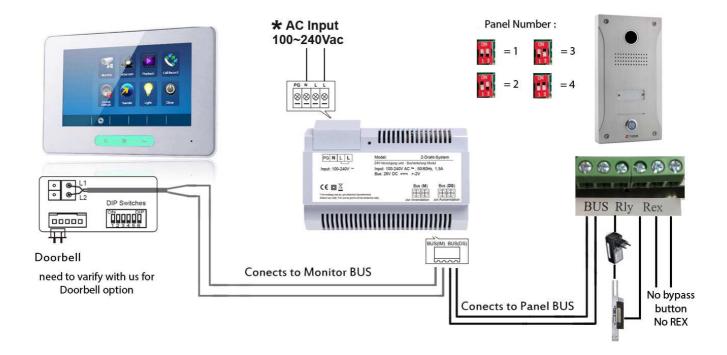

1. General

Topaz Door entry system is Audio-Video door entry system 2 wires based for villa houses and apartments.

The system works on 2 wires and very easy to program and install.

It allows connecting up to 4 panels and 32 monitors.

The door entry panel is Anti-Vandal and made to work under hard weather conditions Allow to see the visitor and open the from the monitor by single click


2. Specifications

Require 2 wires only	Can work with telephone	
	calling with additional Tele	
	adapter	
Possible to connect 32 monitor for		
system	Can work with mobile calling	
	with additional GSM adapter	
Possible to connect 4 Panels for	102 wide degree angle	
system		
Stand Hard weather conditions	Panel with 1/2/4 calling	
	buttons available	

3. Power supply details


Operating voltage					
Transformer type	Description Amount of		Amount of	Amount of	
			monitors	Panels	
Ns-100	24V	4.5A	Up to 3	1	
Ns-150	24V	6.5A	Up to 7	+ 2	
Ns-350	24V	14.6A	Up to 32	+3	
Electric or magnetic			Lock Type		
Normally close או Normally open					
Surface		Flush Mount		Sizes	
213*116*36		170*90*28			

4. Cable Distance Information

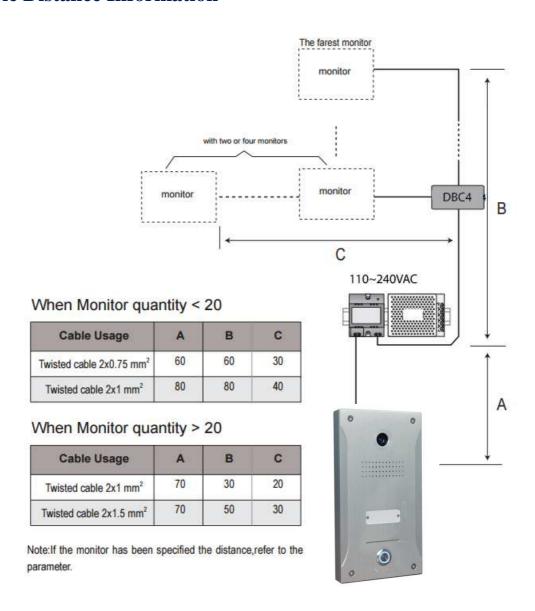


5. Installation diagram

A. Topaz Panel + 1 Monitor

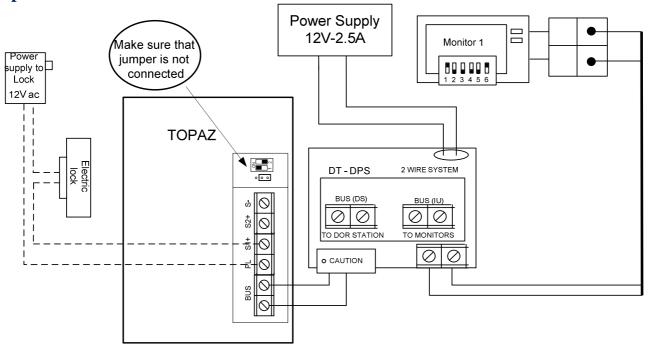


B. Topaz panel + more than one monitor

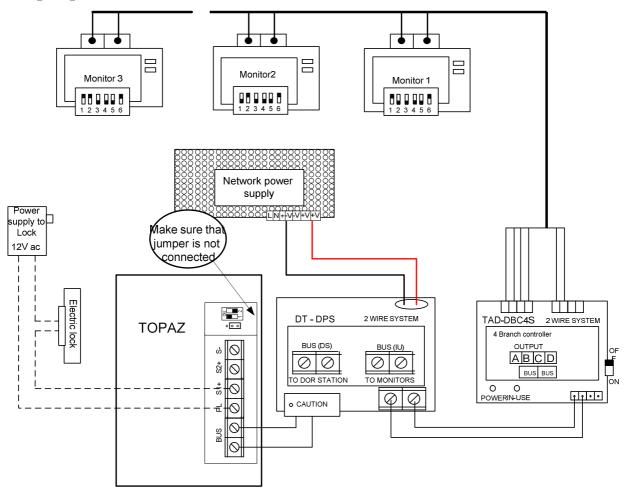

• 250mA, we advise to use external power supply for maximum results as 250mA is lock that made for small voltage and might be to weak for the system

Basic IN-OUT Wiring in Standard Mode

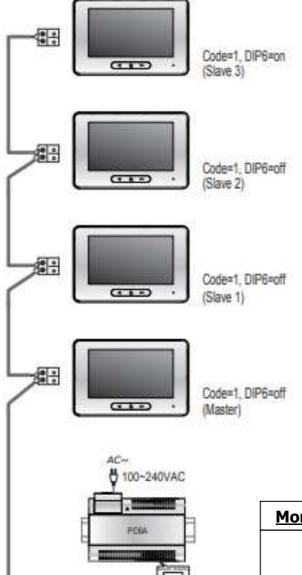


- The door station is also compatible with other monitors which are provided by our company.
- Please set door station into group calling mode if there is more than 4 monitors in villa(Refer to Page 9)
- Distributor is unnecessary in full audio system, and IN-OUT mode is recommended.
- For the last monitor connected to the system, DIP6 should set to ON.


Cable and distance(unit:m)

Cable Usage	A	В	В
		≤2 IM	≤16 IM
Twisted cable 2x0,75mm ²	60	100	40
Twisted cable 2x1mm ²	80	120	60



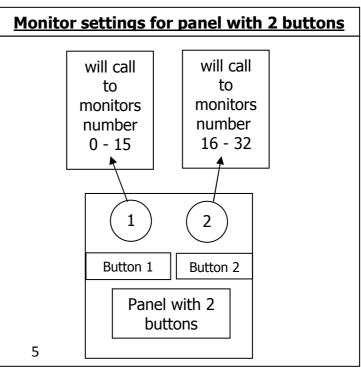

Star Topology Wiring With DBC4A1 in Standard Mode

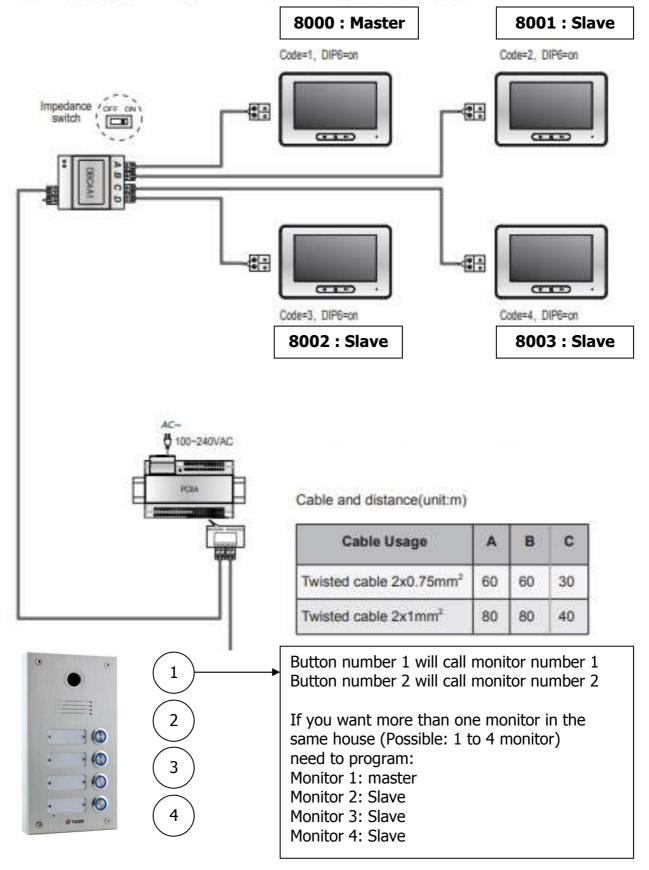


- The door station is also compatible with other monitors which our provided by Tador.
- It can be extended 3 slave monitors for each monitor (Better use with extra distributer for extension)

It is possible to connect up to four panels in a system, and if want to do that you will need to set each panel a different number.

Below setting will allow you to set panel number: 1 - 4

Panel 4	Panel 3	Panel 2	Panel 1
on off on off 2	on off on off on off 2	on off on off 2	on off on off on off 2

Connecting Multi Door Stations

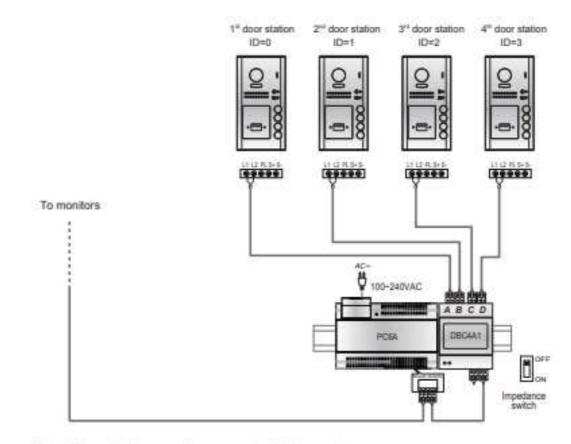

- Max.4 door stations can be connected to the system.
- Ensure to set the correct address for each door station, Refer to Page 8 for more details about the address setting of door stations.

FAQ:

1. Unit doesn't show Picture / Audio?

It may be a problem with infrastructure check below:

Disconnect the unit and connect again in a short distance between the monitor, panel and PC6A if unit show picture, there might be a problem with wires quality or distance.

- + Try to improve the cable quality
- + Try Reduce distance between PC6A and Monitor.



Thank you for buying one of our products

www.Tador.com

All rights reserved Tador Technologies LTD