

iGate 1200 - Complete List of Parameters

The table below show the complete list of features.
Programming messages below must begin with 9999# (assuming 9999 is still the programming passcode)...

Most recent firmware release:
v1.9.1

SMS String	Description	Default	Firmware Version
Passcodes			
9999#01code#	Change programming passcode. Code = 4 digit passcode	9999	Original
9999#02code#	Change access control passcode (SMS control of relays, or non-stored numbers can call intercom & enter code to trigger the relay). Code = 4 digit passcode	1234	v1.9.1 (i.e. unstored number to trigger)

Caller ID

9999#72number#	Store caller ID number (max 14 digits long. 1280 unique numbers). Only last 6 digits compared.	N/A	Original
9999#73number#	Delete caller ID number.	N/A	Original
9999#73*#	Delete all caller ID numbers.	N/A	Original
9999#75X#	Enable Open Caller ID mode. X = 0 or 1 (0 = Disable, 1 = Enable) (allow any unprogrammed number to call unit for immediate access)	0	Original
9999#88X#	Enable KPN Caller ID fix feature. X = 0 or 1 (0 = Disable, 1 = Enable) Feature added by default to prevent potential multi-triggering on some networks.	1	v1.9.1

Service Call

9999#77number#	Store a service number to receive a scheduled call from the unit every 30 days. Useful for SIM cards which are not often used, to prevent switch off by the network provider.	N/A	Original
9999#77*#	Delete the stored service number	N/A	Original

Relay

9999#50X#	Relay trigger time. X = 1-9999 seconds	1 sec	Original
1234#X#	Manually trigger,latch or unlatch relay by SMS. X = Relay function. (1 = Trigger relay, 2 = Latch relay, 3 = Unlatch relay)	N/A	Original

Information

*20#	Check reception level 1-31. Also includes firmware version.	N/A	Original
*21#	Check stored numbers. O = dial out number. I = dial in number. E = end of message.	N/A	Original
*22#	Check input status and relay status.	N/A	Original

Network Settings

9999#69X#	Change 4G modem to only operate on 2G/3G. [No 4G and no 1 hour ping] (4G Only) X = 1 enable ping ; X = 0 disable ping	1	Original
-----------	--	---	----------

Restore Defaults

9999#999#	Send with passcode string to clear all programming.	N/A	Original
Hard Reset PCB if programming passcode is forgotten: Short across the PTE terminals in power off state, before powering on. Keep the terminals shorted for 10 seconds when powered on. N.B. All stored information will be deleted after this process!		N/A	Original