

Quick Start Guide

Wi-Fi Camera Security System

Please read this Quick Start Guide carefully

Contents

NVR Introduction	03
Camera Introduction	05
Camera Installation	08
Connection Diagram	09
Antenna Adjustment	10
Local Basic Operation	11
Web Operation	13
APP Operation	14
FAQ	15
Safety Instruction	16

About the User Manual

- This manual applies to wireless network hard disk recorders and wireless cameras.
- The photos, graphics, diagrams, illustrations, etc. provided in the manual are for illustration only and may differ from the specific product, please refer to the actual product.
- The manual may be updated due to product upgrades or other needs.

Statement

- To the maximum extent permitted by applicable law, the products described in this manual (including hardware, software, firmware, etc.) are provided "as is" and may contain defects, errors, or malfunctions, and our company disclaims all warranties of any kind, express or implied, including, but not limited to, warranties of merchantability, satisfactory quality, fitness for a particular purpose, non-infringement of third party rights, and any special, incidental, consequential, or indirect damages arising out of the use of this manual or the use of our products, including, but not limited to, damages for loss of business profits or loss of data or documentation.
- When using this product, please strictly comply with applicable laws. If this product is used to infringe the rights of third parties or other improper purposes, our company will not be liable.
- In the event of a conflict between the contents of this manual and applicable law, the legal provisions shall prevail.

 
1. NVR Introduction

Power Light

Network Light

HDD Light

USB Port



Wi-Fi Antenna

HD Port


Audio Out



VGA Port

LAN Port


USB Port

Power Input

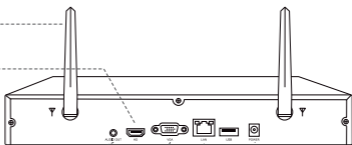

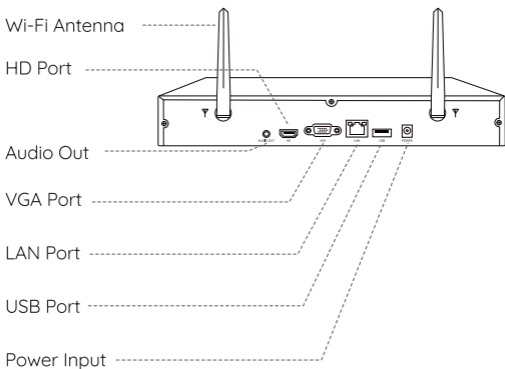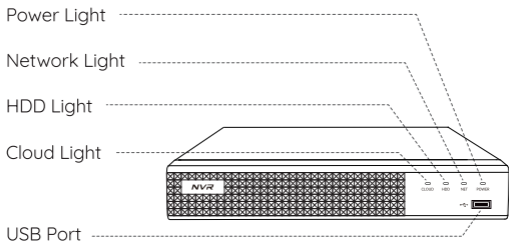


2. Camera Introduction

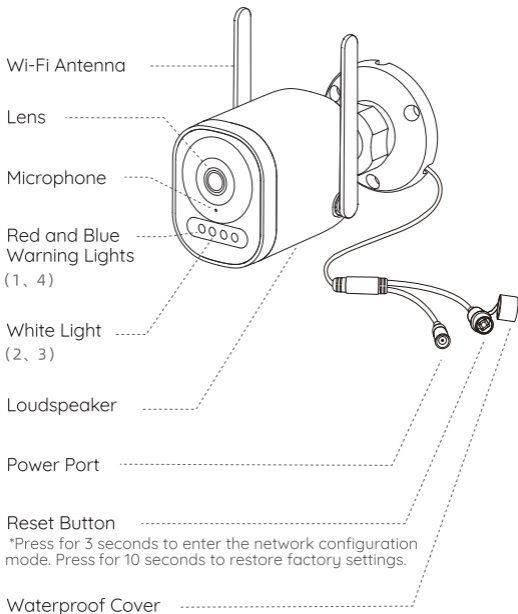

*Press for 3 seconds to enter the network configuration mode. Press for 10 seconds to restore factory settings.

*The waterproof cover serves as a waterproof. When not using the button, please close the waterproof cover.

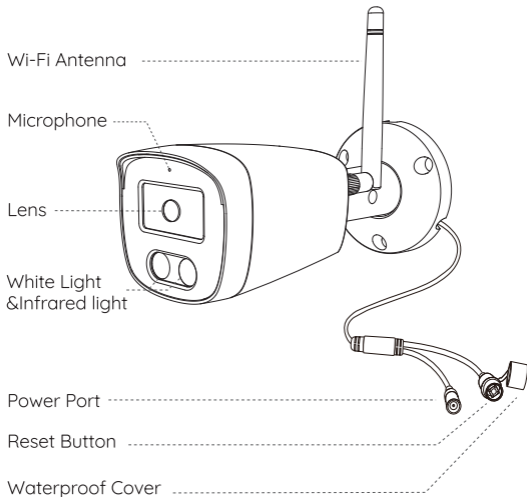

⚠ Note:


- Different types of cameras are introduced in this section. Please check out the camera included in the package and check out the details from the corresponding introduction above.
- The actual appearance and components may vary with different products.

3. Camera Installation

Please use the screws and expansion screws provided to mount the camera on the flat wall. The wall must be strong enough to hold the camera in place. (The camera shown is for illustrative purposes only.)

Installation Steps

1. Positioning stickers are applied to the wall at appropriate locations.
2. Fix the bracket base of the camera to the wall.
3. Loosen the knob to adjust the camera to the right angle, and then tighten the knob.
4. If you want to move the camera to the left or right, loosen the screws and adjust the position.

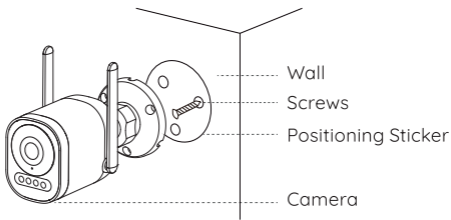


⚠ Note:

- For installation on a wooden wall, the bracket can be mounted directly on the wall by screws.
- For installation on masonry walls (brick, concrete or others), expansion screws need to be installed first.


4. Connection Diagram

1. Use a DC power supply (DC12V1A) to power the camera.
2. Use a DC power supply (DC12V 2A) to power the NVR.
3. Use a network cable to connect the NVR to the router through the network port.

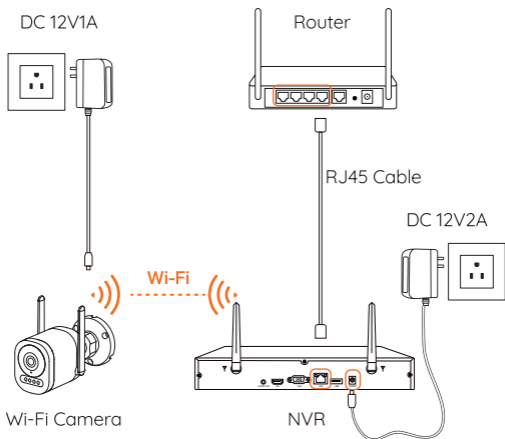


5. Antenna Adjustment

The NVR antenna transmits signals to the surroundings. The effect is best when the antennas of the NVR and IPC are at the same height and parallel to each other. If they cannot be at the same height, the IPC antenna should be tangent to the spherical surface with the NVR as the center of the sphere (Figure 1). Do not let the antenna point directly at the NVR (Figure 2), just place it correctly as shown in the figure below.

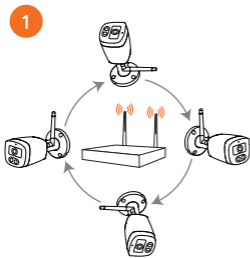

✓ Correct method

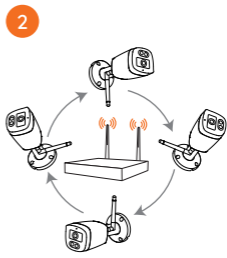

✗ Fault method

6. Local Basic Operation

6.1 Power On

1. Please ensure that the access voltage meets the device requirements and that the device power cord is in good contact.
2. Please ensure the monitor is connected to the video output interface of the device before power on.
3. After the device powers on, the power indicator will be red and the power-on image will appear on the monitor screen.

6.2 Startup Wizard

After the device powers on, users can quickly configure the device through the "Wizard", System Languages -> Administrator Password -> Security Question -> Security Email -> Network Parameters -> System Time.





⚠️ Note:


- After installing the hard drive for the first time, the hard drive must be formatted in the Setup->Video->Hard Drive interface.

6.3 Pairing

If cameras need to be paired, please pair them by the following steps:

Method1: In the live preview interface, click  to enter the channel configuration interface and add or edit cameras.

Method2: In the live preview interface, click  at the bottom of the menu to enter the Settings -> Channel Management to add or edit cameras.

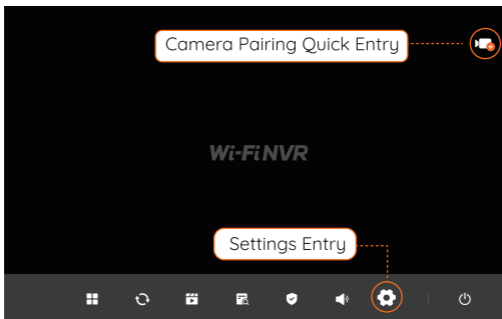

7. Web Operation

Please access the NVR through the following web browsers:

Microsoft Edge、AppleSafari、Mozilla Firefox and Google Chrome.

Steps

1. Enter the IP address of the device in the browser address bar `http://IP` or, if you have changed the http port, please enter `http://IP:HTTPPort` (eg: `http://192.168.1.88:89`).
2. Enter the username and password on the login interface.
3. Click login.

Note:

- After logging in, please follow the system prompts to download and install the Web plug-in. Otherwise, some functions will not be available.

8. App Operation

1. Scan the QR code below with your mobile phone to download and install the BitVision App.
2. Search for "BitVision" in the App Store or Google Play, download and install it.



9. FAQ

Q1: No video output image on the monitor

A: If there is no video output image on the monitor, please try the following methods:

1. Ensure the resolution of the monitor is at least 720p or above.
2. Ensure the NVR is powered on.
3. Check the HD/VGA cable connection carefully, replace another cable or test the monitor.

Q2: Unable to access NVR locally

A: If the NVR cannot be accessed locally by mobile phone or computer, please try the following methods:

1. Ensure the NVR (LAN port) have been connected to the router with a network cable.
2. Replace another network cable to connect to the NVR network port.
3. Go to Settings->System->Maintenance, and restore the factory settings.

Q3: Unable to access NVR remotely

A: If the NVR cannot be accessed remotely by mobile phone or computer, please try the following methods:

1. Ensure the NVR system can be accessed locally.
2. Please connect the mobile phone or PC to the same network of NVR and check if you can access any website.
3. Please restart the NVR and router, then try again.

10. Safety Instruction

- Please install the device in a well-ventilated place and do not block the vents of the device.
- Please keep the device installed horizontally, or in a stable place, and pay attention to prevent the product from falling.
- Please store and use the device within the allowable humidity and moisture range.
- Please use the device within the rated input and output range.
- Do not drip or spill liquids on the device and ensure that items containing liquids are not placed on the device to prevent liquids from flowing into the device.
- Dust on the circuit board will cause a short circuit after moisture. In order to make the NVR work properly for a long time, please regularly use a brush to dust the circuit board, connectors, case, etc.
- When cleaning the device, please do not use volatile solvents such as: alcohol, benzene or thinner, which will damage the surface coating.
- When cleaning the device, please unplug the power cord and completely cut off the power.
- The installation and construction of the device must comply with the specifications, which can refer to the relevant national or local standards.
- If the equipment smokes, smells or is noisy, cut off the power immediately and unplug the power plug cable.

- Do not point the camera lens at cold, such as air conditioning vents, ice, etc.
- Do not place the camera in a shaded area, as this may result in poor image quality. To ensure the best image quality, please place it towards a well-lit area, the lighting conditions for the camera and the captured object should be the same.
- To ensure better image quality, it is recommended to clean the camera lens with a soft cloth regularly.

